



# Technical Information



Ava Round Toilet Roll Holder  
AVA-RA-1030

# Technical Specification

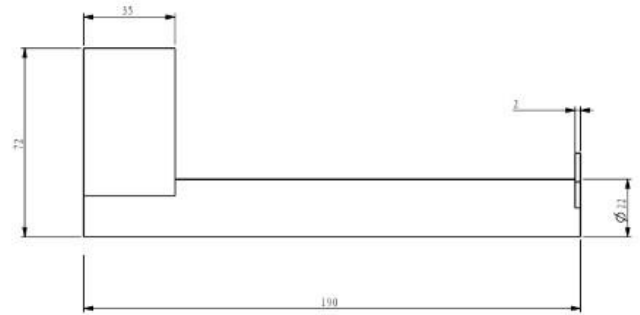

|                            |                                                                                              |
|----------------------------|----------------------------------------------------------------------------------------------|
| <b>Available Finishes:</b> | Brushed Brass, Brushed Black, Brushed Stainless Steel,<br>Polished Stainless Steel           |
| <b>Guarantee:</b>          | 10 Years – Product<br>10 Years – Finish<br>2 Years -Cartridges<br>2 Years – Other Consumable |



# Cleaning & Maintenance Instructions

## CLEANING

**Our products are finished to a very high standard, however specific care is required to maintain the look and finish of your product.**

- We strongly recommend against using any off the shelf cleaning products any products etc and the use of these could invalidate any guarantee.
- We recommend cleaning the product with warm water and a clean cloth and immediately dry afterwards to prevent watermarks.
- We also recommend drying down fixtures after each use.
- To remove stubborn marks on the product, please use a 50/50 vinegar and water solution to clean, then immediately rinse and dry. Do not allow the solution to sit on the product.

## MAINTENANCE

**To maintain your product please follow the advice below annually to ensure the look and performance of your product and to ensure the guarantee is not invalidated. (We recommend seeking the help of a professional if required)**

- For shower heads and hand showers
  - Remove the shower head / hand shower product and any O Rings.
  - Rinse the O Rings to remove any limescale and place the shower head / hand shower in a vinegar solution for 1-2 hours and then thoroughly rinse and dry. Make sure to run water through the head prior to use.
  - Remove any aerators from product and rinse them of any limescale build up.
- For Shower Valves
  - Isolate the flow of water and remove any cartridges, soak them in a vinegar solution for 1-2 hours and then re-install them.

