


-
- IN THE EVENT THAT YOU ARE USING DECK MOUNTED TAPS THEN YOU SHOULD DRILL THE TAP HOLES IN THE POSITIONS MARKED BELOW.

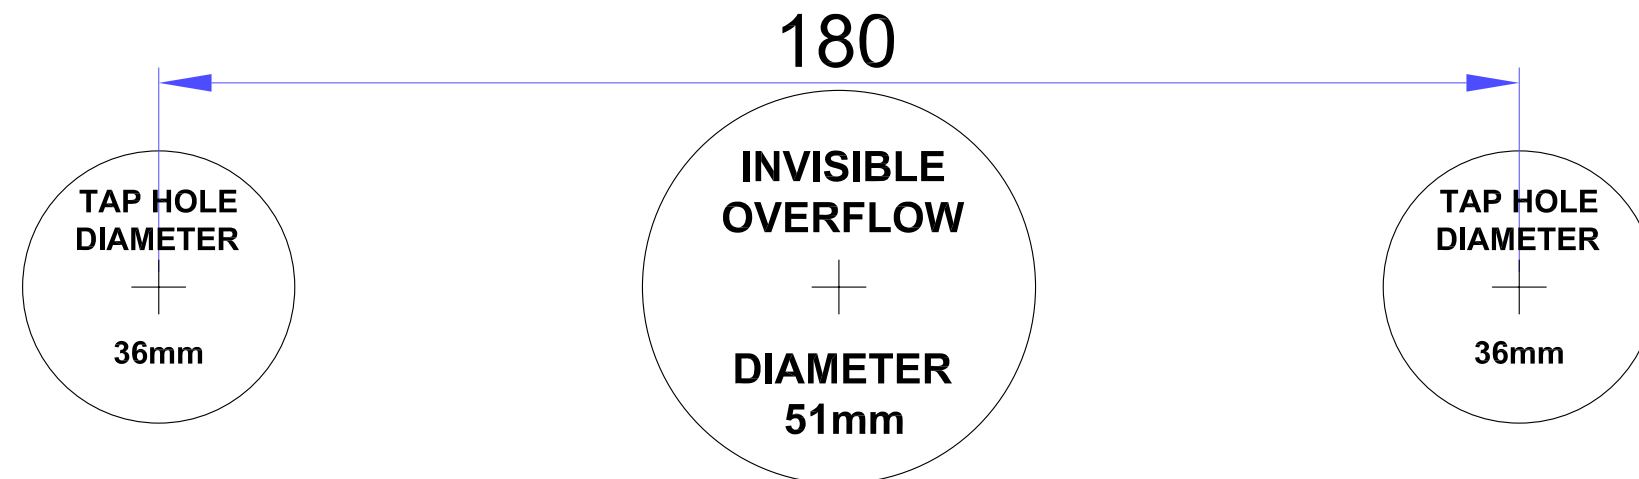

- **EVERY BATH REQUIRES AN OVERFLOW.**
IN THE EVENT THAT YOU ARE USING THE INVISIBLE OVERFLOW THEN YOU SHOULD DRILL IN THE POSITION MARKED ABOVE.
-

- **EVERY BATH REQUIRES AN OVERFLOW.**
IN THE EVENT THAT YOU ARE NOT USING THE INVISIBLE OVERFLOW OR EXTERNAL OVERFLOW THEN YOU SHOULD DRILL IN THE POSITION MARKED BELOW.

Ascot Single Ended 170 - T9E
Blenheim Single Ended - E2

