Burlington®
Yesterday's designs TODAY'S TECHNOLOGY

56cm Towel Rail	T1 CHR
58cm Towel Rail	T2 CHR
61cm Towel Rail	T3 CHR
Cloakroom Towel Rail	T6 CHR
Corner Towel Rail	T8 CHR

Tools required:



Parts supplied:


2x

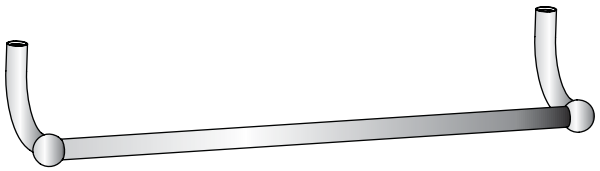
1x

4x

1x

1. Insert the towel rail fixing bolt into each of the fixing holes located underneath the basin.

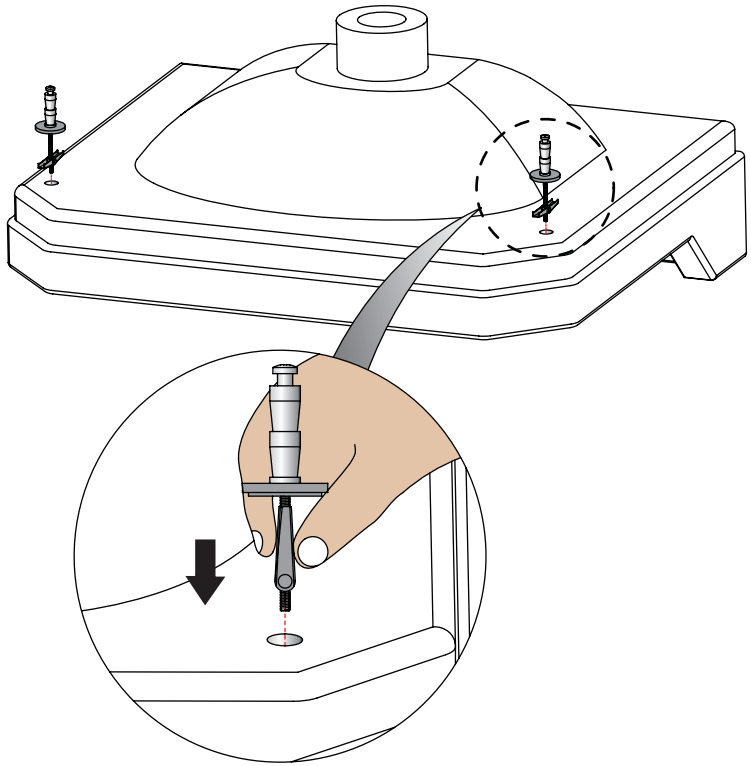

2. Pull the fixing bolt up so that it catches on the inner surface of the basin, and then tighten, but only tight enough to prevent the fitting sliding too much.

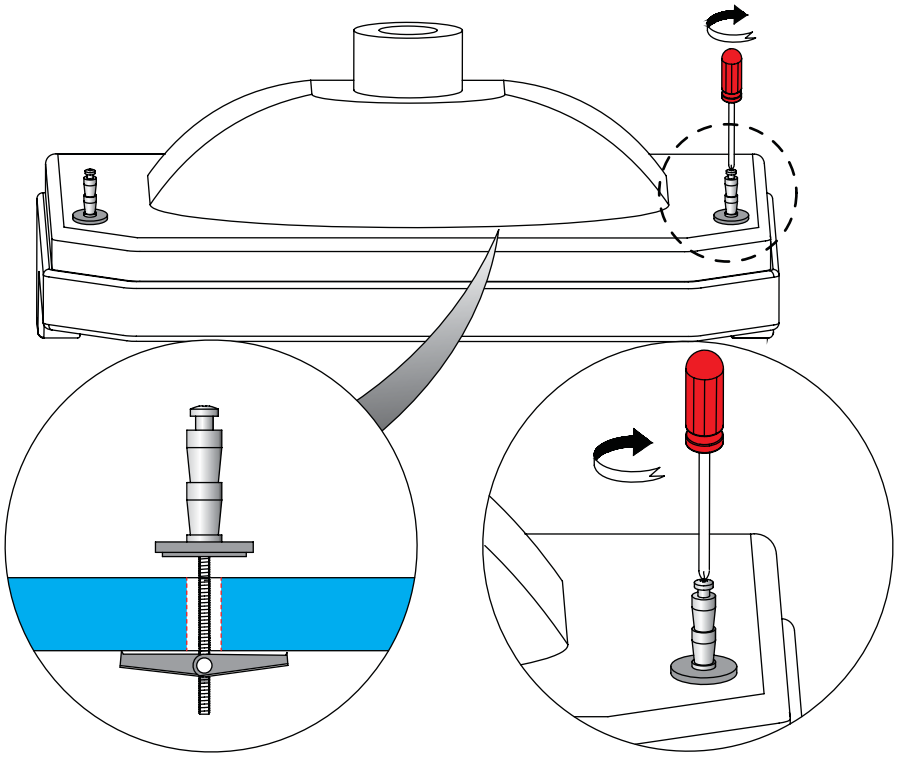

③ a: Offer up the rail and push fully home to the plate – this then centers the fitting in the basin.

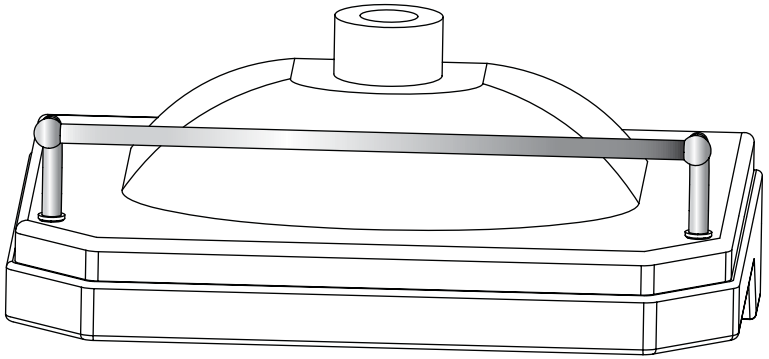

a:

b: Pull the rail off the connectors, without moving the fittings, and fully tighten the connectors to the basin.

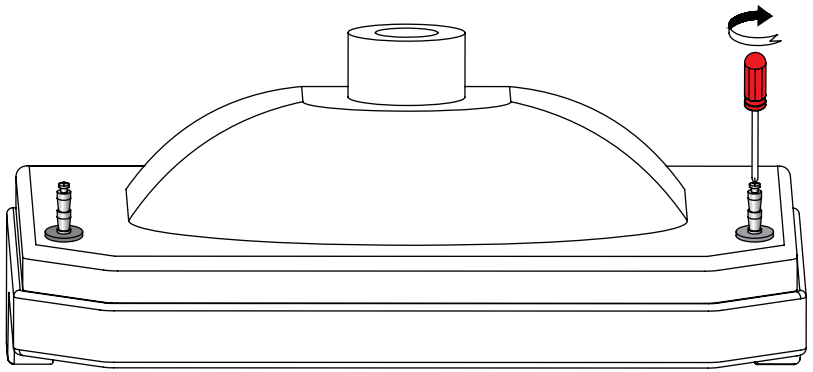

b:
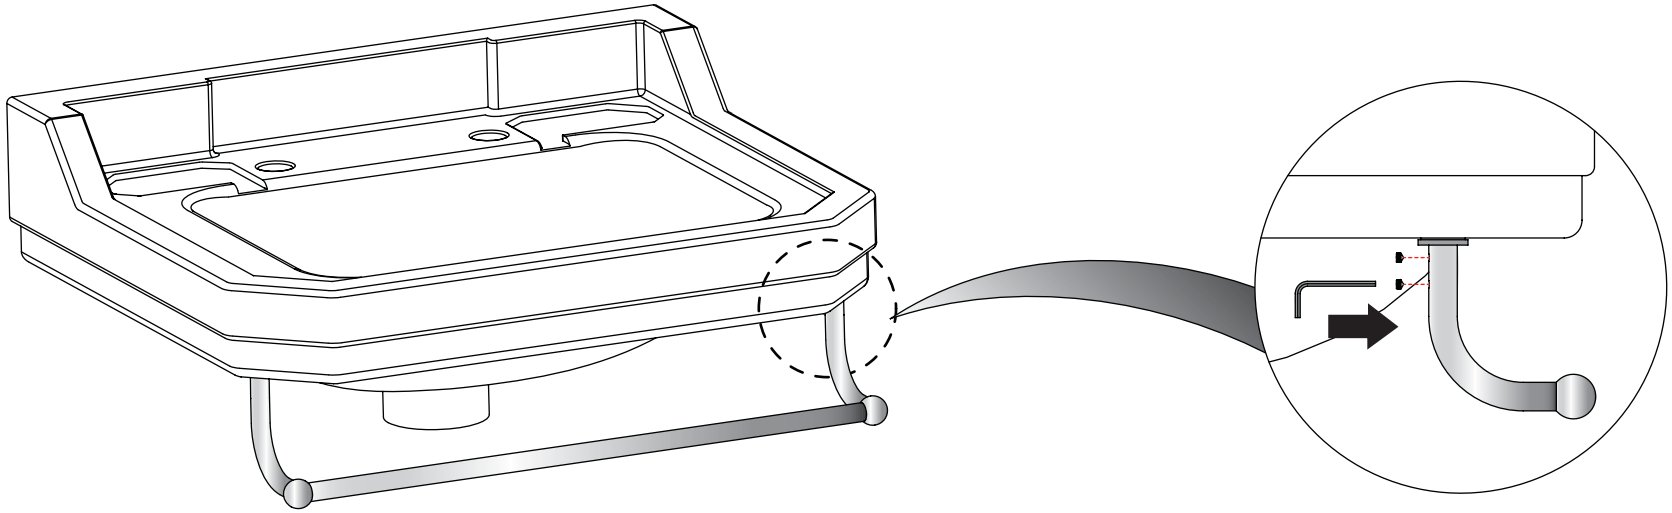
④ Refit the rail to the connectors and lock in position with the 4 grub screws.